

(FREELANCE YAMAHA TUNER) DUSTY MILLAR  
0908 74181

# YAMAHA COMBO SYNTHESIZER

Check that there are no offsets  
on Sample and Hold board.

## CS-80 PARTS LIST



YAMAHA. 0908 71771  
Martin Christie (ENG)  
& Bob Pattern  
ALFRED (FORIGRE)



### CONTENTS

1. Circuit Boards & Components (シート及びシート部品) .....	1
2. Power Supply (電源ユニット) .....	5
3. Key Board & Panel Component (鍵盤及びパネル) .....	7
4. Cabinet (外装部品) .....	10
5. Volume Pedal (ポリウムペダル) .....	12
6. Sustain Pedal (サステーンペダル) .....	13

1. Circuit Boards & Components (シート及びシート部品)

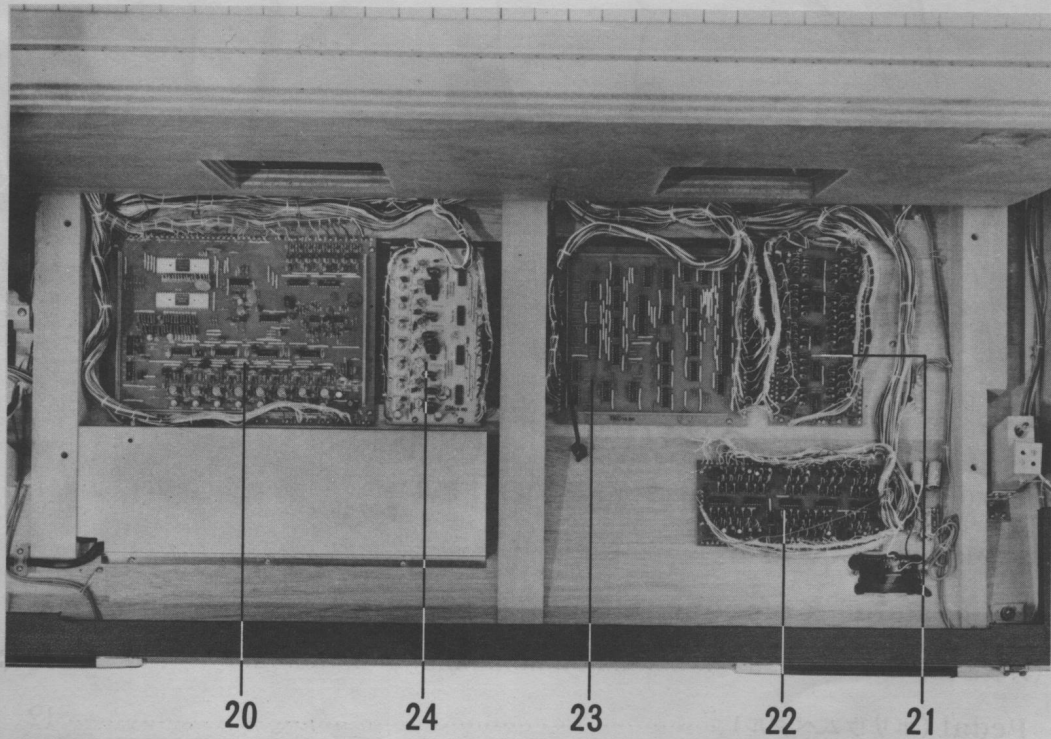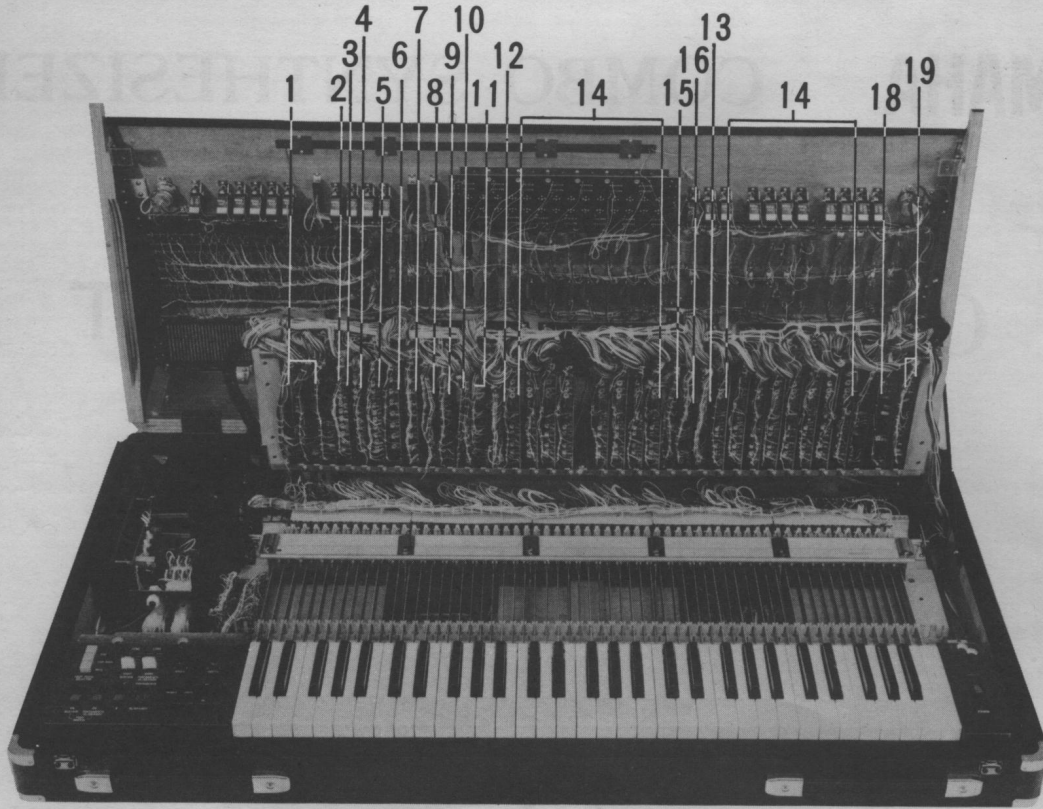


Ref. No.	Part No.	Description (部 品 名)	Remarks	Common Model
1	30:12:80:NA:03:56:20	KBC Circuit Board # 21216	K B C シ ー ト	CS-60
2	30:12:80:NA:03:56:30	TWS -do.- # 21224	T W S "	
3	30:12:80:NA:03:56:40	TRG1 -do.- # 21072	T R G 1 "	
4	30:12:80:NA:03:56:50	TRG2 -do.- # 21072	T R G 2 "	
5	30:12:80:NA:03:56:60	TRG3 -do.- # 21083	T R G 3 "	
6	30:12:80:NA:03:56:70	TRG4 -do.- # 21091	T R G 4 "	
7	30:12:80:NA:03:56:80	TRG5 -do.- # 21101	T R G 5 "	
8	30:12:80:NA:03:56:90	BA -do.- # 21064	B A "	
9	30:12:80:NA:03:57:00	SUB -do.- # 20983	S U B "	
10	30:12:80:NA:03:57:10	T51 -do.- # 22612	T 5 1 "	
11	30:12:80:NA:03:57:20	T52 -do.- # 22621	T 5 2 "	
12	30:12:80:NA:03:57:30	R51 -do.- # 21031	R 5 1 "	
13	30:12:80:NA:03:57:40	R52 -do.- # 21031	R 5 2 "	
14	30:12:80:NA:03:57:40	M -do.- # 21232	M "	
15	30:12:80:NA:03:57:50	T53 -do.- # 22612	T 5 3 "	
16	30:12:80:NA:03:57:60	T54 -do.- # 22621	T 5 4 "	
17	30:12:80:NA:03:57:70	PRA -do.- # 21043	P R A "	
18	30:12:80:NA:03:57:80	OE1 -do.- # 21244	O E 1 "	
19	30:12:80:NA:03:57:90	OE2 -do.- # 21253	O E 2 "	
20	30:12:80:NA:03:58:00	KAS -do.- # 21264	K A S "	CS-60
21	30:12:80:NA:03:58:10	TSB1 -do.- # 21192	T S B 1 "	
22	30:12:80:NA:03:58:20	TSB2 -do.- # 21201	T S B 2 "	
23	30:12:80:NA:03:58:30	TKC -do.- # 21053	T K C "	
24	30:12:80:NA:03:59:30	SH -do.- # 22544	S H "	CS-60
25	30:12:80:NA:03:59:40	SVU -do.- # 22561	S V U "	
	30:10:00:YM:26:60:00	LSI YM26600	L S I	
	30:10:00:YM:26:70:00	-do.- YM26700	"	
	40:10:00:iG:00:11:80	Integrated Circuit TC4013P	I C	
	40:10:00:iG:00:12:10	-do.- LM310	"	
	40:10:00:iG:00:13:90	-do.- NJM4558	"	
	40:10:00:iG:00:05:10	-do.- CD4006AE	"	iG00168
	40:10:00:iG:00:16:90	-do.- TC4016P	"	
	40:10:00:iG:00:17:00	-do.- TC4019P	"	
	40:10:00:iG:00:17:20	-do.- TC4069P	"	
	40:10:00:iG:00:17:30	-do.- TC4073P	"	
	40:10:00:iG:00:15:10	-do.- iG00151	"	iG00181
	40:10:00:iG:00:22:20	-do.- CA3140T	"	
	40:10:00:iG:00:10:40	-do.- TA7504	"	
	40:10:00:iG:00:10:20	-do.- HA1452	"	
	40:10:00:iG:00:15:00	-do.- iG00150	"	
	40:10:00:iG:00:15:40	-do.- iG00154	"	iG00151
	40:10:00:iG:00:15:20	-do.- iG00152	"	
	40:10:00:iG:00:15:30	-do.- iG00153	"	
	40:10:00:iG:00:15:60	-do.- iG00156	"	
	40:10:00:iG:00:15:80	-do.- iG00158	"	
	40:10:00:iG:00:15:90	-do.- iG00159	"	
	40:10:00:iG:00:16:20	-do.- μA796HC	"	
	40:10:00:iG:00:14:10	-do.- BA617	"	
	40:10:00:iG:00:12:60	-do.- TC4049P	"	
	40:10:00:iG:00:16:50	-do.- MN3001	"	
	40:10:00:iG:00:12:40	-do.- TC4011P	"	
	40:10:00:iG:00:16:30	-do.- CA3130	"	

Ref. No.	Part No.	Description (部 品 名)	Remarks	Common Model
40:10:00	iG 00:14:40	Integrated Circuit TC4071P I C		
40:10:00	iG 00:17:70	-do.- TC4051P "		
40:10:00	iG 00:11:90	-do.- TC4015P "		
40:10:00	iG 00:17:60	-do.- TC4081P "		
40:10:00	iC 04:58:30	Transistor 2SC458 トランジスター		
40:10:00	iA 04:90:20	-do.- 2SA490 "		
40:10:00	iA 05:61:70	-do.- 2SA561 "		
40:10:00	iC 08:28:30	-do.- 2SC828 "		
40:10:00	iD 02:34:30	-do.- 2SD234 "		
40:10:00	iE 00:00:10	FET 2SK30 F E T		
40:10:00	iF 00:00:40	Diode IS1555 ダイオード		
40:10:00	iF 00:03:00	-do.- IS1715P "		
40:10:00	HU 19:51:00	Metal Film Resistor 0.1% 100Ω 金属被膜抵抗		
40:10:00	HU 19:61:00	-do.- -do.- 1KΩ "		
40:10:00	HU 19:62:00	-do.- -do.- 2KΩ "		
40:10:00	HU 19:71:00	-do.- -do.- 10KΩ "		
40:10:00	HU 19:72:00	-do.- -do.- 20KΩ "		
40:10:00	HZ 00:08:60	-do.- -do.- 29.94KΩ "		
40:10:00	HU 19:74:00	-do.- -do.- 40KΩ "		
40:10:00	HU 19:78:00	-do.- -do.- 80KΩ "		
40:10:00	HU 19:81:00	-do.- -do.- 100KΩ "		
40:10:00	HU 19:82:20	-do.- -do.- 220KΩ "		
40:10:00	HU 57:61:00	-do.- 1% 1KΩ "		
40:10:00	HU 57:61:50	-do.- -do.- 1.5KΩ "		
40:10:00	HU 57:61:80	-do.- -do.- 1.8KΩ "		
40:10:00	HU 57:62:20	-do.- -do.- 2.2KΩ "		
40:10:00	HU 57:63:00	-do.- -do.- 3KΩ "		
40:10:00	HU 57:66:80	-do.- -do.- 6.8KΩ "		
40:10:00	HU 57:71:50	-do.- -do.- 15KΩ "		
40:10:00	HU 57:72:00	-do.- -do.- 20KΩ "		
40:10:00	HU 57:72:20	-do.- -do.- 22KΩ "		
40:10:00	HU 57:75:60	-do.- -do.- 56KΩ "		
40:10:00	HU 57:81:50	-do.- -do.- 150KΩ "		
40:10:00	Hi 20:94:70	Solid Resistor 4.7MΩ ソリッド抵抗		
40:10:00	Hi 20:95:60	-do.- 5.6MΩ "		
40:10:00	Hi 20:99:90	-do.- 10MΩ "		
40:10:00	HL 32:42:20	Metal Oxide Film Resistor 2W 22Ω 酸化金属被膜抵抗		
40:10:00	FF 04:31:20	Polystyrene Capacitor 1200PF スチロールコンデンサ		
40:10:00	FD 15:31:00	-do.- 1000PF "		
40:10:00	FP 13:53:30	Tantalum Capacitor 16V 0.33μF タンタルコンデンサ		
40:10:00	FP 13:72:20	-do.- 16V 22μF "		
40:10:00	FP 14:61:00	-do.- 25V 1μF "		
40:10:00	FP 15:53:30	-do.- 35V 0.33μF "		

2. Power Supply (電源ユニット)

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
40:10:00	FM:09:62:20	Nonpolar Capacitor 16V 2.2 $\mu$ F	N P コンデンサ	
40:10:00	FM:09:71:00	-do.- 16V 10 $\mu$ F	"	
40:10:00	FM:13:73:30	-do.- 16V 33 $\mu$ F	"	
40:10:00	FM:22:61:00	-do.- 25V 1 $\mu$ F	"	
40:10:00	FM:11:61:00	-do.- 50V 1 $\mu$ F	"	
40:10:00	FM:17:64:70	-do.- 50V 4.7 $\mu$ F	"	
40:10:00	HT:12:01:10	Semi Variable Resistor B-250 $\Omega$	半 固 定 抵 抗 V10K 4A type	
40:10:00	HT:12:00:60	-do.- B-500 $\Omega$	-do.-	
40:10:00	HT:12:00:10	-do.- B-1K $\Omega$	-do.-	
40:10:00	HT:12:00:80	-do.- B-2K $\Omega$	-do.-	
40:10:00	HT:12:00:20	-do.- B-5K $\Omega$	-do.-	
40:10:00	HT:12:00:40	-do.- B-25K $\Omega$	-do.-	
40:10:00	HT:12:00:50	-do.- B-50K $\Omega$	-do.-	
40:10:00	HT:12:00:70	-do.- B-100K $\Omega$	-do.-	
40:10:00	HT:12:00:90	-do.- B-250K $\Omega$	-do.-	
40:10:00	HT:12:01:20	-do.- B-500K $\Omega$	-do.-	
40:10:00	HT:12:01:00	-do.- B-1M $\Omega$	-do.-	
40:10:00	HT:18:01:20	-do.- B-10K $\Omega$	V10K8 type	
40:10:00	HT:18:00:50	-do.- B-20K $\Omega$	-do.-	
40:10:00	HT:18:00:60	-do.- B-50K $\Omega$	-do.-	
40:10:00	HT:18:00:70	-do.- B-100K $\Omega$	-do.-	
40:10:00	HT:18:00:80	-do.- B-500K $\Omega$	-do.-	
40:10:00	HT:55:00:60	-do.- B-3K $\Omega$	3006 type P	
40:10:00	HT:56:01:50	-do.- B-20 $\Omega$	3321 type H	
40:10:00	HT:56:00:00	-do.- B-50 $\Omega$	-do.-	
40:10:00	HT:56:00:20	-do.- B-200 $\Omega$	-do.-	
40:10:00	HT:56:00:60	-do.- B-5K $\Omega$	-do.-	
40:10:00	HT:56:00:70	-do.- B-10K $\Omega$	-do.-	
40:10:00	HT:56:01:00	-do.- B-100K $\Omega$	-do.-	

2. Power Supply (電源ユニット)

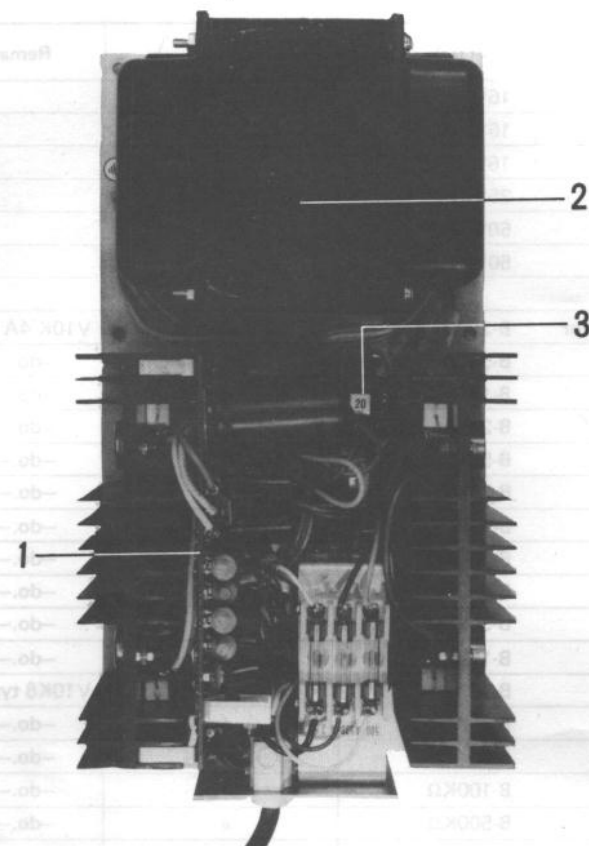


Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
	30:12:00:NP:00:18:00	Power Supply Unit	電源ユニット	BS
	30:12:00:NP:00:18:10	- do. -	"	国内
	30:12:00:NP:00:18:20	- do. -	"	General
	30:12:00:NP:00:18:30	- do. -	"	UL
	30:12:00:NP:00:18:40	- do. -	"	South African
	30:12:00:NP:00:18:50	- do. -	"	Australian
	30:12:00:NP:00:18:60	- do. -	"	European
	30:12:00:NP:00:18:70	- do. -	"	North European
	30:12:00:NP:00:18:80	- do. -	"	CSA
1	30:12:00:NA:03:79:40	SUV Circuit Board #22562	S V U シ ー ト	
	40:10:00:iA:05:61:70	Transistor 2SA561	ト ラ ン ジ ス タ ー	
	40:10:00:iA:04:90:20	- do. - 2SA490	"	
	40:10:00:iC:08:28:80	- do. - 2SC828	"	
	40:10:00:iC:04:58:80	- do. - 2SC458	"	
	40:10:00:iD:02:34:10	- do. - 2SD234	"	
	40:10:00:iF:00:00:40	Diode 1S1555	ダ イ オ ー ド	
	40:10:00:iH:00:01:40	- do. - 10DC-4	"	
	40:10:00:iH:00:01:50	- do. - 10DC-4R	"	
	40:10:00:iH:00:05:90	- do. - 10E-1	"	
	40:10:00:iF:00:01:00	Zener Diode 1S1715	ツ ェ ナ ー ダ イ オ ー ド	
	40:10:00:iF:00:07:80	- do. - WZ150	"	
	40:10:00:iF:00:08:60	- do. - WZ056	"	
	40:10:00:iF:00:04:20	- do. - 02Z5.6A	"	
	40:10:00:iG:00:13:90	Integrated Circuit RC4558	I C	

Key Board & Panel Component (部品名)

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
	40:10:00:HL:31:24:70	Metal Oxide Resistor 1P0.47Ω	酸金抵抗	
	40:10:00:HW:20:34:00	Fuse Resistor 300mA 4Ω	ヒューズ抵抗	
	40:10:00:HT:41:00:10	Solid Variable Resistor B-220Ω	ソリッドボリューム	
	40:10:00:HT:41:02:30	- do. - B-1kΩ	"	
	40:10:00:HT:41:02:40	- do. -	"	
	40:10:00:FQ:02:24:70	Oil Capacitor 630V 0.047μF	オイルコンデンサ	
	40:10:00:FZ:00:01:10	Spark Killer 125V 0.033μ + 120Ω	C R 複合部品	
2	40:10:00:GA:02:89:10	Powertransformer	電源トランス	
	40:10:00:HM:55:31:00	Cement Molded Resistor 5P 1Ω	セメント抵抗	
	40:10:00:iA:04:90:10	Transistor 23A490	トランジスター	
	40:10:00:iA:07:46:00	- do. - 2SA746	"	
	40:10:00:iD:05:56:00	- do. - 2SD556	"	
	40:10:00:iD:02:34:10	- do. - 2SD234	"	
3	40:10:00:iH:00:01:70	Diode 6B20	ダイオード (単相ブリッジ)	
	40:10:00:KB:00:04:30	Fuse 2.5AT	ヒューズ	国内
	40:10:00:KB:00:03:30	- do. - 1AT	"	Australian
	40:10:00:KB:00:03:10	- do. - 500mAT	"	国内, General South African, Aust.
	40:10:00:KB:00:07:10	- do. - miniature type 500mAT	ミニチュアヒューズ	European, BS, North European
	40:10:00:KB:00:06:80	- do. - - do. - 1.25AT	"	BS
	40:10:00:KB:00:11:50	- do. - Approved by UL 500mAT	UL ヒューズ	UL
	40:10:00:KB:00:14:50	- do. - - do. - 2.5AT	"	UL
	40:10:00:LB:20:12:20	Fuse Holder Block Type	ヒューズホルダー	国内, General, UL, South Africa, Australia
	40:10:00:LB:20:10:90	- do. -	"	BS, European, North European
	40:10:00:LB:60:15:30	Connector 6pin	コネクタ - 6 P	
	40:10:00:LB:60:15:40	- do. - 9pin	"	
	40:10:00:FJ:24:91:00	Capacitor 25V 1000μF	電解コンデンサ	
	40:10:00:FM:38:95:60	- do. - 40V 5600μF	"	

3. Key Board & Panel Component (鍵盤及びパネル)

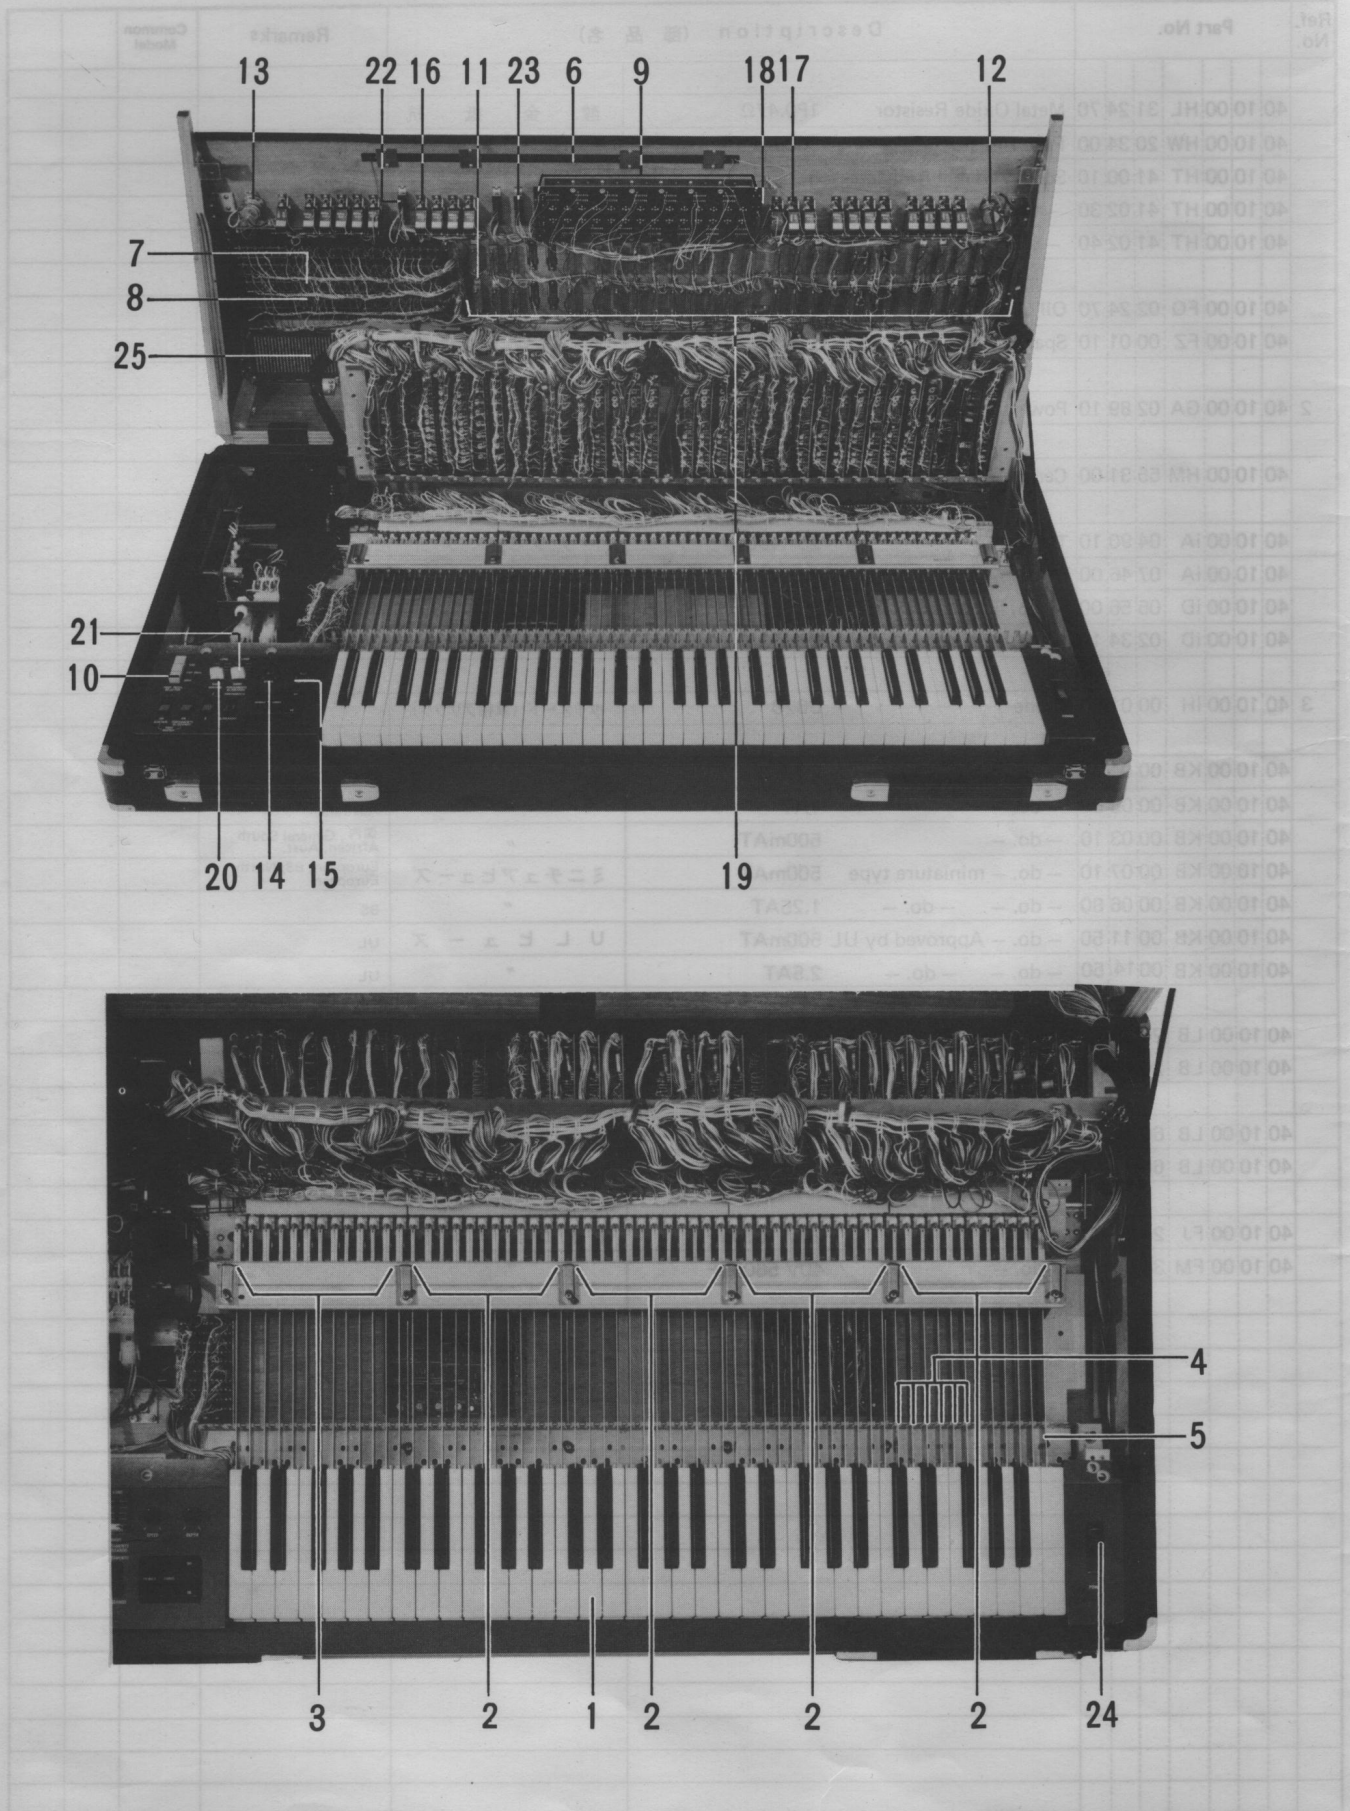




Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
1	30:12:80:NB:04:77:00	Keyboard Assembly	鍵盤 Ass'y	
2	30:12:80:NB:04:77:20	Switch Assembly Key Switch 2, 3, 4, 5u	スイッチ Ass'y	12 Keys
3	30:12:80:NB:04:77:30	-do.- 1u	"	13 Keys
	30:11:80:NB:04:34:30	White Key Assembly C, F	白 鍵 Ass'y	P301 P302
	30:11:80:NB:04:34:40	-do.- D	"	-do.-
	30:11:80:NB:04:34:50	-do.- E, B	"	-do.-
	30:11:80:NB:04:34:60	-do.- G	"	-do.-
	30:11:80:NB:04:34:70	-do.- A	"	-do.-
	30:12:80:NB:04:34:80	-do.- C#	"	-do.-
	30:12:80:NB:04:77:10	Black Key Assembly	黒 鍵 Ass'y	
4	30:10:00:CB:02:78:40	Support	サポ ー ト	P301 P302
5	30:10:00:CB:02:84:10	Pibot Rubber	ピボットゴム	-do.-
6	30:10:00:NB:01:79:70	Slide Controller Assembly	スライドコントローラー Ass'y	CS-60, YC-45D, E-5
	30:10:00:CB:02:86:00	Slide Knob White	スライドツマミ 白	CS-60, 50
	30:10:00:CB:02:86:10	-do.- Black	" 黒	-do.-
	30:10:00:CB:02:86:20	-do.- Red	" 赤	-do.-
	30:10:00:CB:02:86:30	-do.- Green	" 緑	-do.-
	30:10:00:CB:02:86:40	-do.- Yellow	" 黄	-do.-
	30:10:00:CB:02:86:50	-do.- Gray	" 灰	-do.-
	30:10:00:CB:02:86:60	Knob Black	ツマミ 黒	for VOLUME -do.-
	30:10:00:CB:02:86:70	TVR Knob White	" 白	-do.-
	30:10:00:CB:02:86:80	-do.- Black	" 黒	-do.-
	30:10:00:CB:02:86:90	-do.- Red	" 赤	-do.-
	30:10:00:CB:02:87:00	-do.- Green	" 緑	-do.-
	30:10:00:CB:02:87:10	-do.- Gray	" 灰	-do.-
	30:10:00:CB:03:01:20	Knob Black (out side)	" (外側)	for PITCH -do.-
	30:10:00:CB:03:01:30	-do.- (in side)	" (内側)	-do.- -do.-
	30:10:00:CB:00:49:50	-do.- Black	" 黒	
7	40:10:00:KA:40:04:80	Slide Switch TPS-2P Black	" 黒	for Memory Bank CS-60
8	40:10:00:HP:50:01:50	Slide Variable Resistor TPR B-10K Black	スライド V R 黒	-do.- -do.-
	40:10:00:HP:50:01:60	-do.- Gray	" 灰	-do.- -do.-
	40:10:00:HP:50:01:70	-do.- White	" 白	-do.- -do.-
	40:10:00:HP:50:01:80	-do.- Green	" 緑	-do.- -do.-
	40:10:00:HP:50:01:90	-do.- Red	" 赤	-do.- -do.-
	40:10:00:HP:50:02:00	-do.- Yellow	" 黄	-do.- -do.-
9	40:10:00:KA:90:06:00	Push Switch 28 channels	プッシュ S W	for TONE SELECTOR
10	40:10:00:KA:70:11:60	-do.-	"	for FOOT PEDAL SELECTOR
11	40:10:00:KA:10:00:90	See Saw Switch	シーソー S W	CS-60, 50
12	40:10:00:HR:20:00:30	Variable Resistor A-10K $\Omega$ x 2	ポ リ ウ ム	for VOLUME
13	40:10:00:HR:60:00:20	-do.- B-10K $\Omega$ +B-500 $\Omega$ (Center Click Type)	"	for PITCH CS-60, 50
14	40:10:00:HR:20:01:00	-do.- B-10K $\Omega$	"	for SPEED
15	40:10:00:HR:20:01:20	-do.- B-500K $\Omega$ x 2	"	for DEPTH




## 4. Cabinet (外装部品)

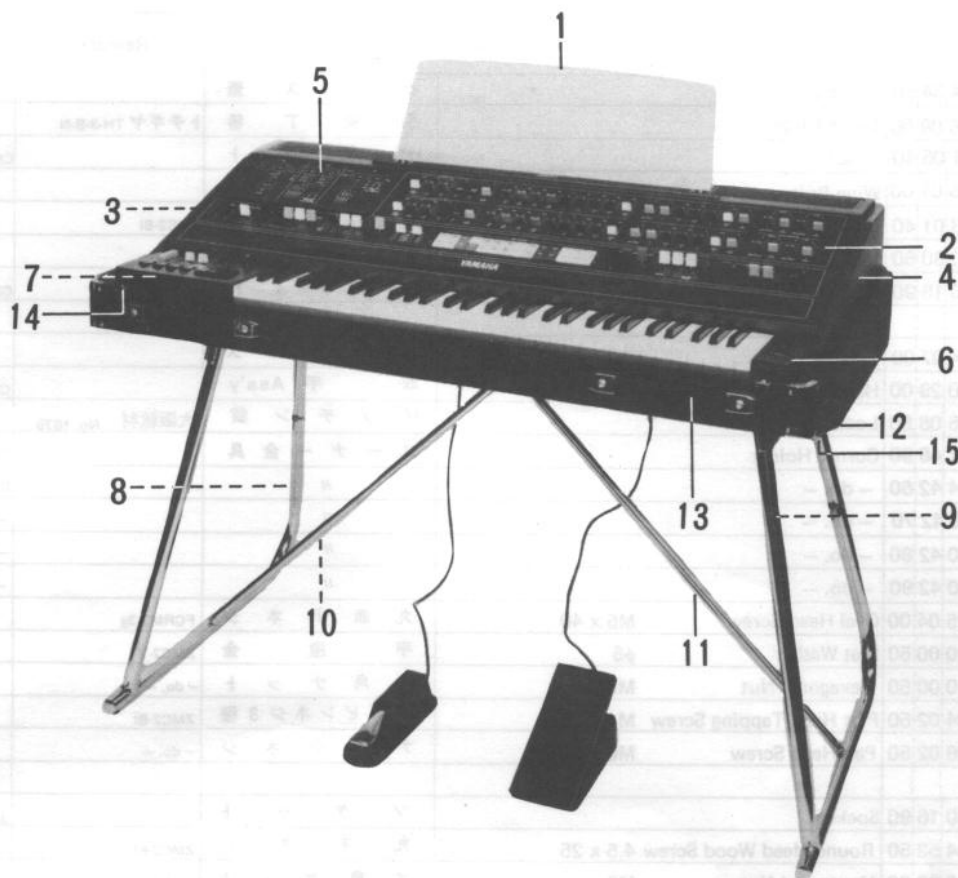

Ref. No.	Part No.	Description (部品名)		Remarks	Common Model
1	30 10 00 CB 02 47 00	Music Rest	譜面台		GX-1, CS-60
	30 12 80 00 04 54 60	Stopper for Music Rest	譜面止メ		
	30 10 00 BA 01 14 20	Accessory for Music Rest	譜面板飾り面棒		
2	30 12 80 00 04 19 00	Control Panel	コントロールパネル		
	30 10 00 AA 04 14 10	Angle for Control Panel	アングル		
3	30 12 80 00 04 51 00	Side Board (Left)	パネル側板 (左)		
4	30 12 80 00 04 51 10	- do. - (Right)	" (右)		
5	30 10 00 CB 02 91 60	Lid for Memoly Bank	メモリーバンク蓋		
	30 10 00 NK 00 31 30	Memoly Panel	メモリーパネル		
6	30 12 80 00 04 55 30	End Block (Right)	柏子木 (右)	BS, N, European, European	
	30 12 80 NK 00 31 10	- do. - (- do. -)	" (")	Others	
7	30 12 80 00 04 55 10	- do. - (Left)	" (左)		
8	30 10 00 NB 04 56 50	Leg Assembly (Left)	脚柱 (左)		
9	30 10 00 NB 04 79 30	- do. - (Right)	" (右)		
10	30 10 00 AA 03 76 00	Stay for Leg (Left)	支柱 (左)		
11	30 10 00 AA 03 75 90	- do. - (Right)	" (右)		
	30 10 00 AA 04 13 00	Cap for Leg	脚用キャップ		
	30 10 00 AA 01 39 90	Adjusting Screw	脚調整ネジ		CS-60, YC-20
	40 10 00 CB 01 14 00	Knob Bolt for Stay Stopper M8 x 25	ノブボルト		CS-60, YC-20, 30
	40 10 00 CB 01 03 50	Knob Bolt for Leg Stopper M6 x 20	"		- do. -
	30 10 00 AA 03 76 40	Stay	支柱本体		

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
30128000043450		External Cover	ケース蓋	
301000AA960900		Latch Hinge	引掛丁番	トチギヤ TH-3-B-N
401000CB010640		P Nut	P ナット	CS-60
401000EV750100		Wing Bolt M5 x 10	蝶ネジ	
401000EB330140		Flat Head Screw M3 x 14	サラ小ネジ	ZMC2-BI
401000EV203060		Flat Washer 6S	平座金	-do.-
301000BB001890		Hexagonal Nut	特殊ナット	CS-60
12 30128000040700		Cabinet	本体ケース	
13 301000NB802900		Handle Assembly	取手 Ass'y	CS-60, 50
14 401000AA960880		Lock	バッチン錠	大阪靴材 No. 1675
15 301000AA014690		Corner Holder	コーナー金具	YC-10
301000BB044260		- do. -	"	CS-50
301000BB004270		- do. -	"	-do.-
301000BB004280		- do. -	"	-do.-
301000BB004290		- do. -	"	-do.-
401000EF250400		Oval Head Screw M5 x 40	丸皿小ネジ	FCRM3-3g
401000EV200050		Flat Washer φ5	平座金	ZMC2-Y
401000EV100050		Hexagonal Nut M5	六角ナット	-do.-
401000EO340250		Flat Head Tapping Screw M4 x 25	タッピンネジ3種	ZMC2-BI
401000EA360250		Pan Head Screw M6 x 25	ナベ小ネジ	-do.-
305400AA801690		Socket	ソケット	J-100S
401000EQ345250		Round Head Wood Screw 4.5 x 25	丸木ネジ	ZMC2-BI
401000EV103060		Hexagonal Nut M6	六角ナット	-do.-
401000EA360300		Pan Head Screw M6 x 30	ナベ小ネジ	ZMC2-BI
301000CB010310		Case Leg	脚	TA-20, 30
401000EB330120		Flat Head Screw M3 x 12	サラ小ネジ	ZMC2-BI
401000EQ335200		Round Head Wood Screw 3.5 x 20	丸木ネジ	-do.-
401000EA330200		Pan Head Screw M3 x 20	ナベ小ネジ	-do.-
301000AA015870		Flat Washer A	脚受座金 A	CS-60, YC-25D, 45D
401000EP331100		Flat Head Wood Screw 3.1 x 10	サラ木ネジ	ZMC2-BI
		Bolt, Leg Holder	脚用ナット	
30128000040710		Lid AC Cord	コード収納蓋	
301000AA013980		Stopper Holder	止め金具	CS-60, TC-25D, 45D
301000AA037610		Grille Radiator	放熱グリル(底板)	

5. Volume Pedal (ポリウムペダル)

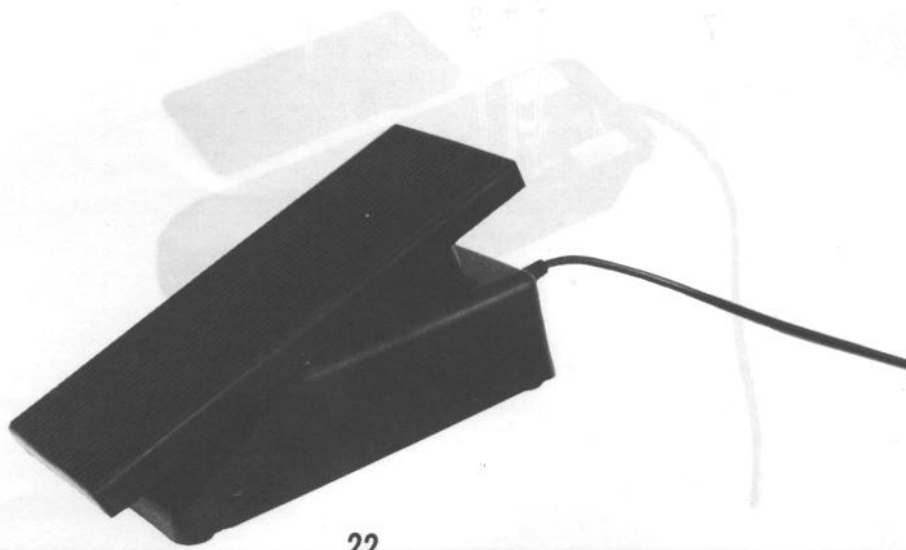

22

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
22	30:12:00:NB 04:53:60	EXP Pedal	E X P ペダル	CS-50, CS-60
	30:10:00:CB 01:02:60	Case	ケース	-do.-
	30:10:00:AA 01:37:70	Flame	フレーム	-do.-
	30:10:00:DB 03:00:40	Rubber for Stopper	すべり止ゴム	-do.-
	30:10:00:AA 01:38:00	Pedal	踏 板	-do.-
	30:10:00:CB 00:36:80	Rubber Pedal mat	マ ッ ト	-do.-
	40:10:00:EV 10:00:40	Hexagonal nut 4s	接 点 カ バ ー	CS-50, CS-60
	40:10:00:EV 10:00:60	- do. - 6s	"	-do.-
	30:10:00:AA 01:08:10	Shatler Plate	シャッター板	CS-50, CS-60
	40:10:00:CG 00:00:10	Frosted Glass	スリガラス	-do.-
	40:10:00:iK 00:00:30	Photocell, Cds	C d s	CS-50, CS-60
	30:10:00:CB 00:76:30	Photocell holder	C d s ホ ル ダ ー	-do.-
	40:10:00:JB 00:01:70	Lamp, 24V5W	ラ ン プ	CS-50, CS-60
	30:10:00:CB 00:76:40	Lamp holder	ランプホルダー	-do.-
	30:10:00:CB 00:76:20	Cover for Lamp	ランプカバー	-do.-
	40:10:00:LB 20:01:20	Lam socket	ブ ラ ケ ッ ト	CS-50, CS-60

